





Turn the Dreamcast over, remove the modem and all four screws from the bottom of the console.



Turn the console back over, remove the top, the two screws from the power supply (1 & 2) and the power switch connector.

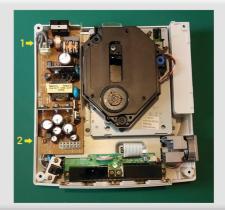

Remove the original Dreamcast power supply and firmly push the DreamPSU onto the power pins of the Dreamcast.

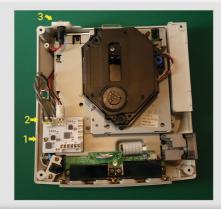

Using a screw from step two, secure the DreamPSU (1), Connect the Dreamcast power switch (2) and the rear adapter(3).

## Congratulations, Your DreamPSU is now fully installed, Enjoy.

If you are planning on using any internal mods with the DreamPSU, I suggest that you replace the stock fan with an alternative like the "Noctua Fan Mod" by collingall.

DreamPSU.com November 2017